


1) Line up the #1 hole in the picture with the 1<sup>st</sup> predrill hole on the side panel of the cabinet. The #2 hole in the picture should line up with the 3<sup>rd</sup> predrill hole on the side panel. More screws can be added as needed. Do the same for the other side.

2) Assemble the drawer box as shown below. Note: Drawer front is preassemble with the box front panel.



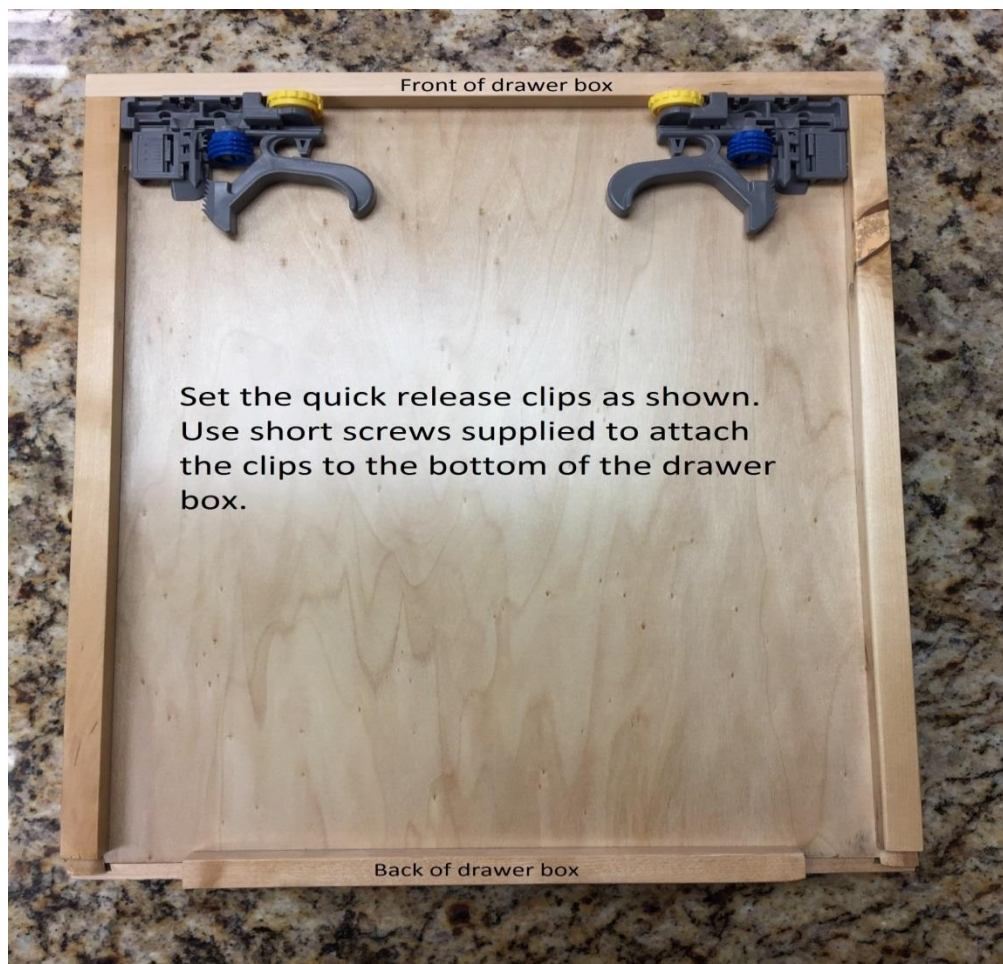

3) Place the box on the drawer slide and guide the box to the back until the quick release clips snap into place. The back hook should line up with the holes on the back of the drawer box.

